


USER Manual

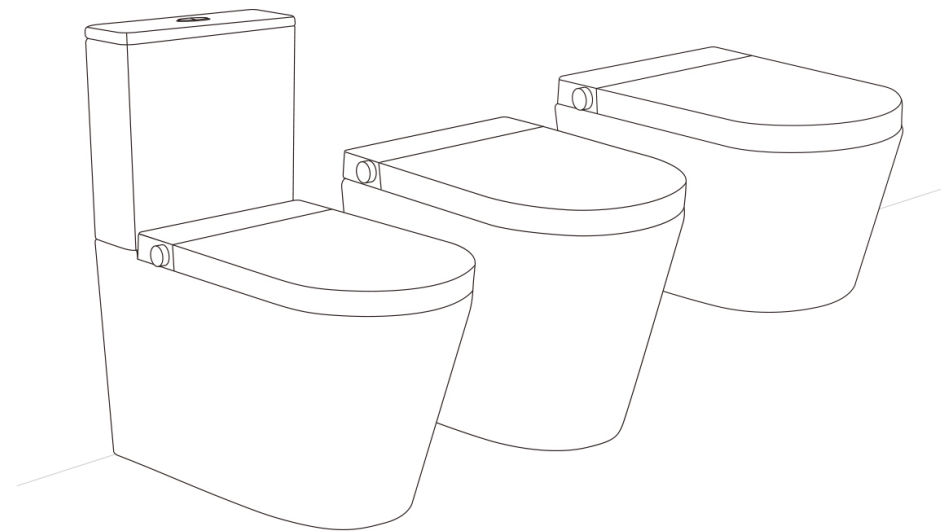

Thank you for purchasing our products, please read the manual carefully and use it correctly, this manual comes with a quality assurance certificate, please keep it in a safe place.

Content

Safety Precautions	03
Packing List	07
Function setting and adjustment	08
Daily cleaning and maintenance	18
Fault diagnosis and maintenance	21
Service/Maintenance Guide	27

Safety precautions

Please read these cautions and warnings carefully and use the equipment correctly. Follow all precautions and warnings for your safety.

- ※ In order to prevent the danger of resetting the fuse arbitrarily, enclosed fuse is used.
- ※ The meanings of these indications are as follows.

	WARNING	Indicates that misoperation could result in death or serious injury.
	CAUTION	Indicates that misoperation may result in injury or physical damage.
	Required	Indicates that the action must be followed
	Prohibit	Indicates prohibited

 WARNING		
	Do not disassemble	Never disassemble, repair or modify the device. This could cause fire, electric shock or cause product to not work correctly.
	Do not wet	Do not wet the main unit or mains plug with water or cleaning fluid. Doing so could cause fire or electric shock.
	Flammable	Do not bring burning materials near the device. Doing so could cause fire.
	Earthing	Confirm that the earth wire has been installed properly. If the earth wire is not installed, electric leakage or electric shocks could occur. If the earth wire has not been installed, request installation from the business that installed the unit.
	Do not touch with wet hands	Do not remove the mains plug with wet hands. This could cause fire or electric shock.



! WARNING

Do not continue to use the device that is broken or malfunctioning.

In the following situations, disconnect the mains plug and close the water shut-off valve to stop the water supply.



Prohibited

Possible malfunctions


- Water is leaking from plumbing or the main unit.
- The device has a crack or a break.
- Smoke is coming from the device.
- The device is unusually hot.



Continued use of a malfunctioning or broken unit could cause fire, electric shock, or flooding of the room containing the unit.

Use only tap water or potable well water (groundwater).

Use of other water could cause skin inflammation or other problems.

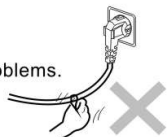

Do not climb on the seat, the toilet lid or any other part of the main unit. Do not put heavy objects on it.

- 1.injury could result if the device breaks.
- 2.Flooding could result if the device breaks.



Do not block the air openings with fingers or other objects. Do not touch the air openings with hands or cover it. Doing so could cause burns or electric shock



Do not disassemble

- Do not bend or crush the water supply hose
- 1.This could cause a water leak.
 - 2.This could cause low or no water pressure



When cleaning ,use kitchen cleaning detergent.
Do not use scrubbing brush
Thoroughly tighten the drain valve with built-in water filter or water leak could occur.

Do not detach the drain valve with built-in water filter while the water shut-off valve is still open.
Doing so will cause water leakage.

Do not discard anything other than human waste and toilet paper into the toilet ,

! WARNING

1.Since this is electronic equipment, do not locate it in a place where it might be splashed or otherwise become wet. When using it in a bathroom, install a ventilation fan or ventilation opening, so that the bathroom has sufficient airflow.
(Failure to observe this caution may result in fire or electrical shock.)

2.Install the wiring plug at least 1m away from the Inlet and keep distance from any bathtub.
(Failure to observe this caution may result in fire or electrical shock.)

3.Please use power supply 240V AC, 50 Hz.
(Failure to observe this caution may result in fire or electrical shock.)

4.The device is equipped with an earth wire
Confirm that the plug and the earth wire have been installed properly.

5.When installed in a bathroom with a bathtub and a toilet, seal the contact area of the plug and socket with silicon to prevent water or moisture from Penetration

6.This equipment is not to be used by any person who has reduced physical sensory or mental abilities (including children), nor is it to be used by any person who lacks sufficient experience or knowledge. However, such persons may use the equipment when a person who takes responsibility for their safety provides supervision and direction.

7.Children should be supervised if unfamiliar with basic operation.




Required

Seat heater could cause skin discomfort with prolonged use at high temperatures.
When seated on the toilet for a long time, set the seat heater to "off".


Thoroughly tighten the stop valve

--If not, water leak could occur.

If a water leak occurs, close the water shut-off valve and stop the water supply.
Turn clockwise to reduce the water pressure.

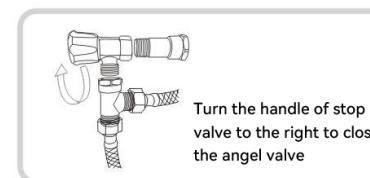

Turn the handle of stop valve to the right to close the angle valve

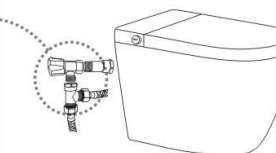

Keep the indoor temperature above 5°C
Freezing could cause damage to the water supply plumbing and the inside of the device and result in a leak.




Precautions for use

Please follow these instructions regarding the device.

Wipe the main unit, seat or toilet lid with a soft wet cloth.
When cleaning, use diluted (pH neutral) kitchen cleaning detergent. Do not use the following:
Toilet cleaner, household cleaner (pH acidic or alkaline), benzine, paint thinner, cleanser powders, etc.
--These could damage the plastic or cause cracks, which could lead to injury.



Do not expose to direct sunlight.
--Direct exposure could cause changes in colour or crack, as well as malfunction of the remote control.

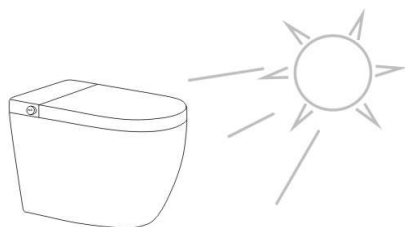


Avoid urinating on the main unit.
--This can cause malfunction.



Do not cover the seat sensor or the signal transmission area of the remote control.
-- This could cause the device to function incorrectly.



Disconnect the mains plug when the device will not be used for a long time.

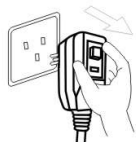

Disconnect the mains plug during thunderstorms.
--This could cause the device to function incorrectly.




Bill of Material

Dear user:

After opening the packaging of this product, please count the following items included in the product packaging box:

1. Ceramic Toilet Pan - two piece for smart
2. Ceramic Toilet Cistern (two piece model only)
3. One user manual;
4. One remote control and wall bracket (batteries included).

5. 1 bottle of foam solution.

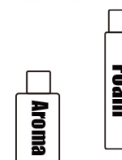

6. 1 bottle of air freshener

7. 1 set of hose (optional).



8. One backup battery box (optional); (Before use, it is necessary to bring and install 10 alkaline AA battery.)




9. One stop valve (optional)




10. One drain pipe (optional)


REMOTE CONTROL

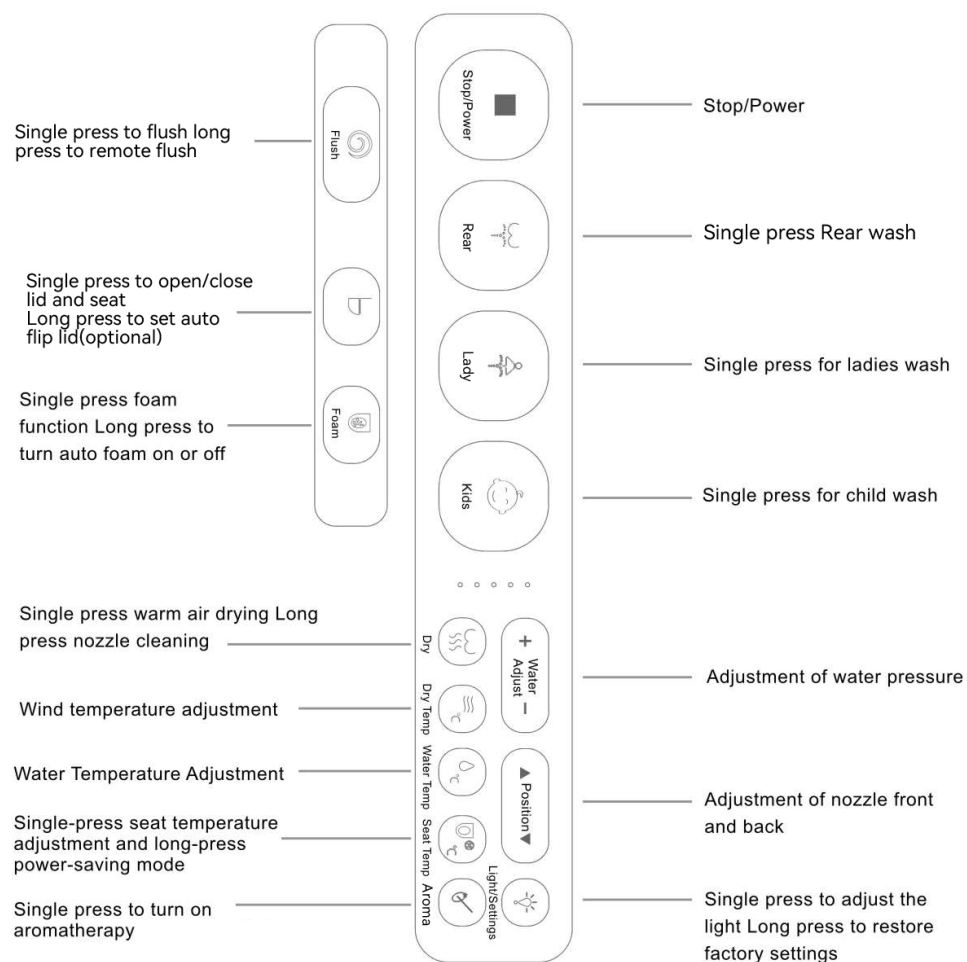

Main unit display

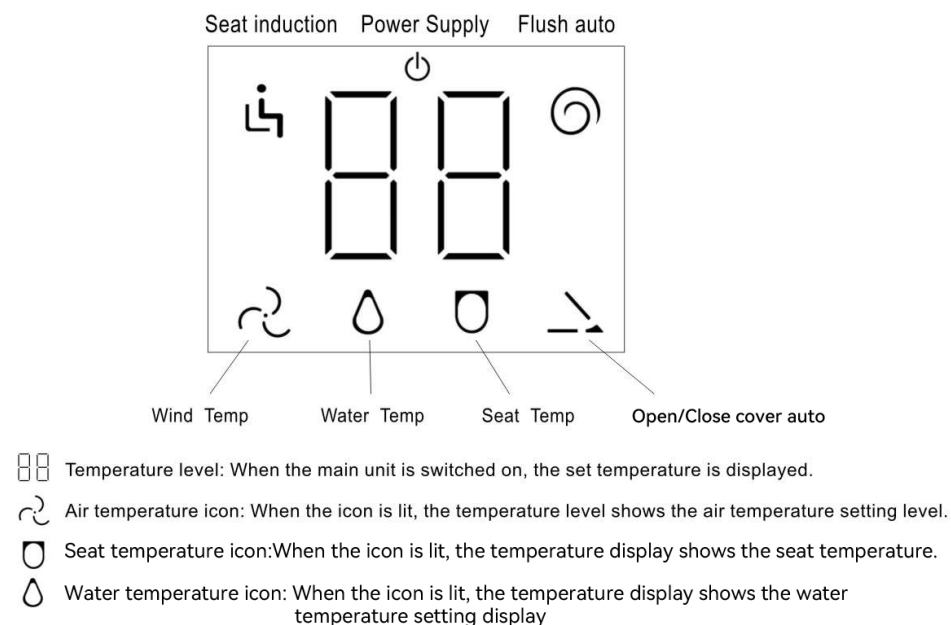

Built in remote control

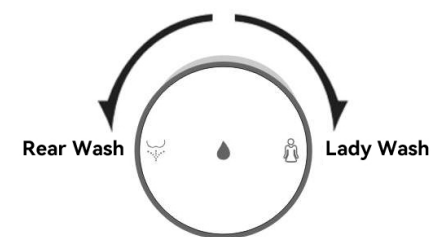

Press the dial to switch flushing/stopping

- Press once to perform standard flush, long hold to stop, hold for six seconds to enter standby mode.
- Seat state, clockwise rotary dial or single press the button of the lady wash can open the lady wash one key cleaning function; counterclockwise rotary knob or single press the button of the rear wash can open the rear one button cleaning function; single press dial, you can stop the current function(such as rear wash, female wash, drying)

Before use

● Preparation



- ① Remove the remote control from the bracket and lift it upward by grasping the ends of the remote control with your hands.



- ② Open the battery cover on the back of the remote control
- ③ Install 2 AAA battery according to the icon.
- ④ Close the battery cover

Remote control pair code instructions. (Replace new remote control)

1. When the toilet is powered off, press and hold the remote control until the remote control light blinks and then let go. Press the button **[KIDS]**
2. Turn on the toilet, The remote and seat will pair automatically, once successful you will hear a beep tone.
3. Once the toilet display is active you can test the temperature controls to confirm pairing



Remote control batteries notes :

To prevent the batteries from rupturing or leaking liquid, observe the following. Use two new batteries of the same size AAA. Remove the batteries when not in use for a long time. The current settings (temperature, power saving, auto-flush) may be cancelled after replacing the batteries, so please reset them.

● Make sure the mains plug is plugged in to a socket.

Please turn off the main operation section when repairing.



AUTO SEAT SETTINGS AND ADJUSTMENT

Remote Control Flip Seat and Lid

- Open/close lid(optional)
Auto open/close lid--Opening the lid automatically when a person enters the sensor range.
--Closing the lid automatically when a person leaves.
--Hold [Auto flip] button for a few seconds to turn Auto open/close lid on/off.
- Sensor distance setting
Long press the [①Rear] wash button to set, the display shows the corresponding number, display 51 represents the near distance (Distance from foot sensor 60cm-80cm) , display 52 represents the far distance (1m), this time you can press the remote control [②Position] button to adjust .



- Remote Control Open / Close Lid and seat
One press [Auto flip] button can open or close the cover, when the cover is open, press [Auto flip] button again to turn up the seat, when both the cover and seat are open, press [Auto flip] button to close the seat and cover. When both lid and seat are closed, press [Auto flip] seat in turn.



Auto Seat lift (Optional Function)

Foot Sensor - When the foot touches the foot sensor position, the seat will be lifted up automatically.

-When the foot sensor is touched again after the seat is lifted, the flushing function is executed.

-When the foot sensor is touched again after flushing, the seat and cover are closed. After the automatic




● Foam Shield (Optional)

Auto Foam - Long press the foam button to turn on or off the auto foam, the toilet will have a corresponding beep. After the function is turned on the seat will be automatically triggered once foaming, within 20 seconds again without repeating the implementation.(when people sit on seat)

Manual Foaming -Single press [Foam] button to start the foam function once.

* Only use the foam liquid supplied with your toilet, prohibit the use of detergents, shower gel, shampoo and non-branded original foam liquid failure to comply can void your warranty.

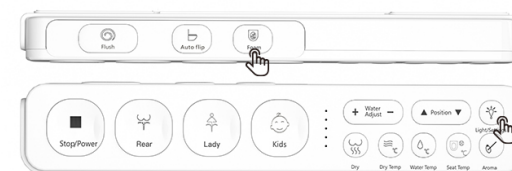

● Night light .

Press the light button once to activate the ambient night light, press again to turn it off.

The night light in the commode can be automatically controlled by a photosensitive sensor, which turns on the night light according to the strength of the ambient light.

● Flush Function.

1.Remote Control Flush . Single press the remote control .

2.Side Button Flush-Single press the flush button will flush once.


AUTO FLUSH - Once the user stands up, the toilet automatically performs one flush.

-Press and hold the [FLUSH] button to turn on/off the automatic flush function.

3.Foot Sensor Flush - When the seat and lid are in upturned state,Movement of the foot can activate a single foot sensor flush, and the seat and lid will be closed automatically after a delayed period of time.

4.One-touch cleaning for flushing

After the function is activated, it will first perform 10 seconds of regular cleaning, followed by 20 seconds of oscillate and 60 seconds of regular cleaning and automatically proceed to perform the rinsing and 3 minutes of drying function.

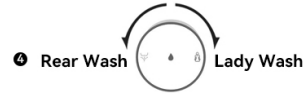

● Rear Bidet Function.

After contacting the seat sensor point, press the [Rear] button on the remote control or rotate the knob on the side of the toilet to perform the wash function.

Press the remote control or side knob again to select the [Rear] and then activate the oscillate.

While the rear wash function is in progress, it is possible to:

Single press [Position] to change the wash position by adjusting the spout extension length.

Adjustment of water pressure and temperature:

1.Single press [Water Adjust] to adjust the strength of the water pressure of the bidet

2.Single press [water Temp]to adjust the temperature of the water.

3.Single press [Stop/Power] to end the bidet function.



● Lady washing function.

This product is equipped with a bidet washing function suitable for women, a special soft water flow to clean the skin after contacting the seat sensor point, single press the remote control [Lady] button, or by use of the built in rotary controller on the side of the toilet bowl to activate bidet washing function.

During Lady washing function, it can do:

Double press the remote control or side knob to select the [Lady] and then activate the oscillate.

Adjustment of water pressure and temperature:

1.Single press [Water Adjust] to adjust the strength of the water pressure of the bidet

2.Single press [water Temp]to adjust the temperature of the water.

 
3.Single press [Stop/Power] to end the bidet function.



● Adjustment of washing water pressure

In the state of Rear washing or Lady washing, press the remote control [Water Adjust] key.

The water pressure can be adjusted according to your preference.



● Wash position adjustment.

In the state of either front or rear bidet washing, press the remote control [Position] key, you can move the nozzle back and forth to adjust the washing position according to your preference.

4 wash positions are available. Operate the function key [Position] to adjust to the appropriate wash position.



● Child Wash Mode.


When activated, the water pressure and temperature are automatically set to low levels and cannot be adjusted. This function is designed to protect children's sensitive skin.



● Adjustment of bidet water temperature

The water temperature of the rear or lady washing function can be adjusted by remote control, please select the appropriate temperature to use, to prevent scalding press the remote control [water temp] button, you can adjust the temperature of the water out of the spray gun, when adjusting the main body of the toilet display will show the temperature change, The LED indicators light to reflect the following.

Temperature a total of 4 gears: room temperature gear, a 34 degrees, the second 37 degrees, the third 40 degrees

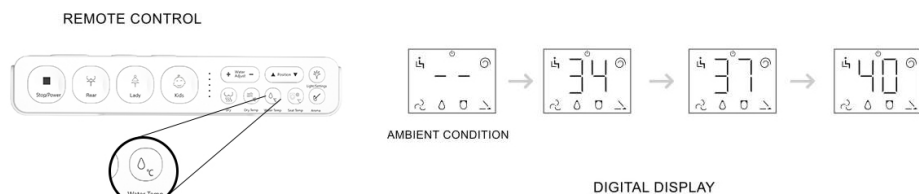


● Seat temperature adjustment.

Please choose the appropriate temperature to use, beware of scalding.

Press the remote control [seat temperature] button, you can adjust the temperature of the seat, when adjusting the toilet body display will show the temperature change, if you want to turn off, please adjust to room temperature.

Four seat temperature options are available - ambient room temperature, 34 degrees, 37 degrees and 40 degrees.

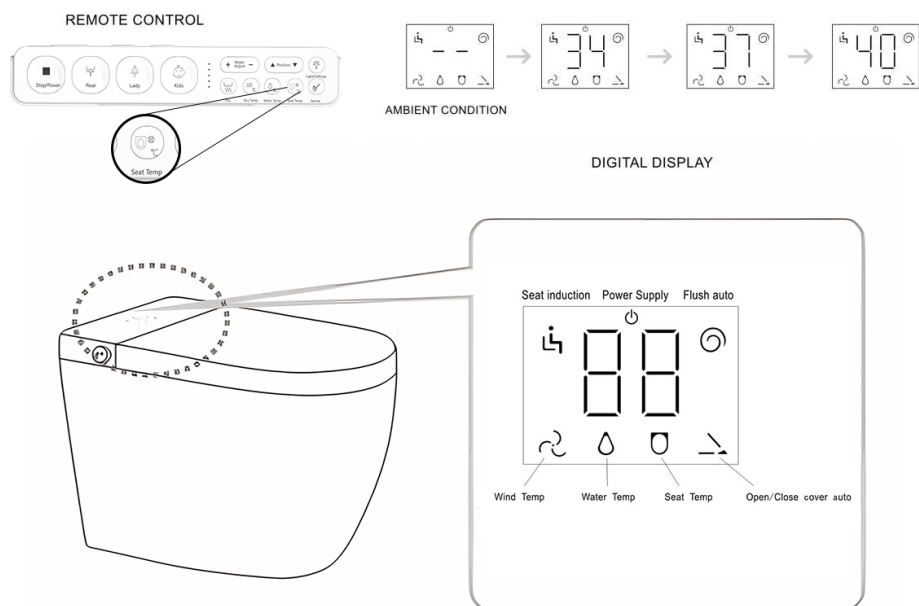

Note: When the function is activated, the corresponding function identifier on the display screen lights up.

● Drying Function.


Single press the remote control [Dry] button, to activate the drying function, please choose the appropriate temperature to use, beware of scalding. -The drying function stops automatically after 3 minutes, and can be interrupted within 3 minutes by pressing the [Stop/Power] button of the remote control.

-Press the remote control fix brackets button to adjust the temperature of the drying air, when adjusting the toilet body display will show the temperature change, The remote control LED indicators will reflect your changes through the four temperature options.

The four drying temperature options available are - ambient room temperature, 38 degrees, 45 degrees and 55 degrees

-Automatic drying.

Long press [stop] to enter the settings, and single press [Dry Temp] to activate the flushing function before drying.

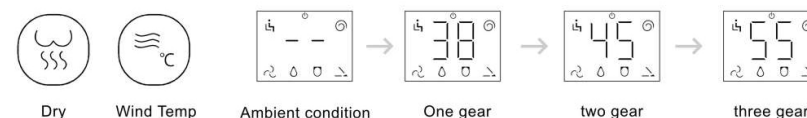

● Energy saving standby

This machine has an automatic energy saving and standby function, after three consecutive days without any operation the toilet automatically enters the power-saving state, four consecutive days without any operation the toilet will automatically enter the standby state. Pressing any key on the rotary controller or remote control will exit either mode.

● **Cleaning nozzle.**

Long press the drying button  to activate the bidet nozzle cleaning function. this self cleaning cycle takes 2 minutes, after which it can be repeated if necessary.

● **Adjusting the cleaning time of the Lady and rear bidet.**

In the state of Lady and rear bidet washing function, long press the water pressure adjustment button to adjust the cleaning time of the corresponding function, the default time is 90 seconds. This can be set within 1-4 minutes according to your own preference, with memory.

● **Anti low temperature scald .**

After 3 minutes of use with the the seat heating function active, the temprature will automatically drop to 30 degrees to reduce the risk of scalding. The setting will return to your required temprature after leaving the seat.

● **Moistening Function.**

After seating , the toilet will flush a small amount of water to moisten the ceramic wall, effectively preventing hanging dirt. (This feature is enabled by default.)

● **Air freshener**

The air freshener spray comes out from the right side of the toilet., The kit comes with a refill funnel and 1 bottle of aromatherapy or deodorant. You can contact the customer service of each shopping platform for refill supply.

-Air freshener: Long press the remote control [Stop] key to enter the setting, single press the aroma button and then single press [Stop] to end the setting.

-Manual mode: Single press the remote control aroma button will turn on the function for 1 time

● **Four seasons temperature sensing seat (optional).**

When the four seasons temperature sensing function is turned on, the toilet will automatically change the set seat temperature according to the temperature feedback from the room temperature sensor. Long press the aroma button on the remote control to turn on or off.

● **Voice function (optional)**

This function allows you to operate the toilet through the corresponding voice words.

Wake up the word	FUNCTIONS	
Hi Smart	Turn on Lid	Cool seat temperature
	Turn off Lid	Rise Flow
	Turn on Seat	Decrease Flow
	Turn off Seat	Rise Air Temperature
	Turn on Lighting	Decrease Air Temperature
	Turn off Lighting	Rise Water Temperature
	Turn on energy saving	Decrease Water Temperature
	Turn off energy saving	Position Forward
	Start flushing/Toilet flushing	Position Backward
	Turn on Bubble	Turn on radio
	Rear Wash	Turn off radio
	Female Wash	Turn up voice
	Turn on Warm Air	Turn down voice
	Stop Wash	Open speech recognition
	Turn off Warm Air/Stop Warm Air	Close speech recognition

● **UV sterilization (optional).**

After the lid is opened and the flushing function is executed, the UV lamp will be turned on automatically after the lid is closed manually or automatically to carry out the sterilizing cycle, and will be stopped automatically during the lid opening action.

● **Electrolysis water atomization sterilization (optional):**

After opening the lid and the implementation of the flush function, manual or automatic closing of the lid will automatically turn on the point o rhydrolysis after spraying the bowl for sterilization.

Once the lid is closed manually or automatically it will carry out the sterilizing cycle, and will be stopped automatically during the lid opening action.


Daily cleaning and maintenance

● Cleaning and maintenance of the Smart Toilet.

When cleaning the surface of the main unit, wipe it with a soft cloth moistened with water.

*When cleaning and maintaining, first unplug the power plug from the socket to avoid the power plug coming into contact with water.

*When there are stubborn stains on the surface of the product, use a soft cloth dampened with kitchen detergent (neutral) to scrub.

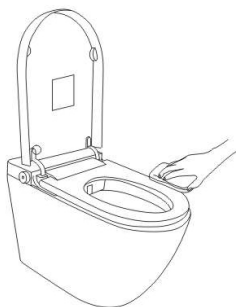

This is an electronic product, please take care to prevent water from entering inside the product

Keep the sensor area of the touch base clean.

A dirty sensor area may cause the set function to operate incorrectly or not operate.

● Cleaning and maintenance of the ceramic part of the Smart Toilet.

Pour neutral toilet cleaner into a soft brush or sponge and wash with tap water.

*Do not use detergents or sanitizers that contain scented or acidic solvents.

*Do not use brushes containing abrasive materials.



● Freezing occurs.

During the cold season, the Smart Toilet may be damaged due to internal freezing. To prevent freezing from occurring, leave the power on and do the following.

*Set both the seat temperature and water temperature to the highest setting.

*In the unlikely event that the water inlet hose freezes internally and the spray water does not come out, warm the water inlet hose with a cloth soaked in warm water to thaw it out slowly. You can also turn on the heater to warm up the room and thaw it out by yourself.

● Condensation.


Due to the difference in temperature and humidity between the room temperature and the surface temperature and humidity of the ceramic part of the Smart Toilet and the main unit, Condensation may appear on the surface of the Smart Toilet condensation by ventilating the toilet adequately.

*When condensation occurs, wipe with a cloth.


● When not in use for a long time:

When this product is not used for a long time, in order to prevent water pollution and water freezing, please make sure to drain the water in this product, turn off the power and take out the batteries of the remote control.

<1> Shut off the water inlet valve, stop the water supply, and press once to flush and empty the water tank.

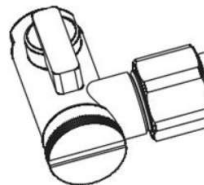

<2> Unplug the power supply from the socket.

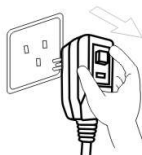

<3> Remove the water inlet hose from the water inlet valve, drain the water from the hose, and install it back. *When you use it again, open the water inlet valve, plug the power plug back into the socket and turn on the machine.

Cleaning nozzle.


Long press the Dry button in non-working condition after power on, can open the cleaning nozzle state, at this time the water from the nozzle self-cleaning mouth outflow, at the same time the cleaner extends forward, and the nozzle can be cleaned during this period.

During this period can be cleaned on the nozzle, single time cycle of 2 minutes, can be repeated open

● Cleaning nozzle.

Long press the Dry button in non-working condition after power on, to start the cleaning nozzle state, the cleaner extends forward, and the nozzle can be cleaned during this period.

Single time cycle of 2 minutes, can be repeated open

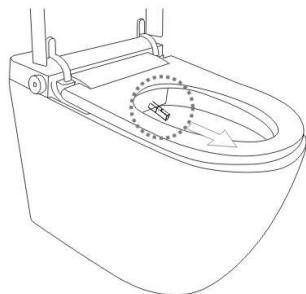

Please use a soft bristle brush or toothbrush to clean.
*Do not pull or push the nozzle or it may cause nozzle damage or malfunction.

Troubleshooting

Please read this section to troubleshoot any problem before requesting repairs. If you still cannot solve the problem after reviewing this section, please contact the supplier for your nearest service agent.

※ Please remove the mains plug before repairs.



CAUTION


※ When the wire is damaged, it is the responsibility of the manufacturer, after-sales service center, or a qualified serviceman to replace it to avoid a safety accident.
This equipment is not to be used by any person who has reduced physical, sensory or mental abilities, nor is it to be used by any person who lacks sufficient experience or knowledge.




Required

- Children must be supervised to make certain that they do not play with the equipment.
- Use the new hose set included with this equipment. Do not reuse an old hose set.

※ If a water leak occurs, close the water shut-off valve to stop the water supply.

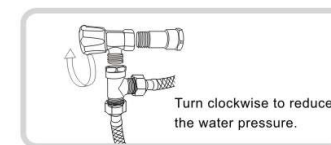

Turn clockwise to reduce the water pressure.

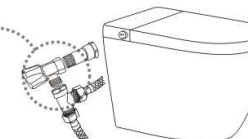

● Please confirm the following points before requesting repair.

Power supply

Trouble	Tests and Results	Solution
Device does not work.	Has there been a power outage is the main power supply turned on	If there is a power cut wait for the Mains power supply to return

Rear Wash, Lady Wash, KIDS Function

Failure phenomenon	Judgment (Cause)	Troubleshooting
No water coming out of the wash	No rinse water	The water supply is not instant please, wait for water to come.
	Is the water valve closed?	Turn on the water valve.
	Is the sensing area not being touched?	Sit correctly or turn bypass on the no-seat

Trouble	Tests and Results	Solution
Decrease in wash water pressure	Is the set water pressure weak	Press the button on the remote control to turn up the water pressure 
	Is the nozzle or filter clogged	Cleaning nozzles or filters
The water is not warm enough	Whether the warm water switch is turned off or the set temperature is too low	Press the button on the remote control to Adjustment of water temperature 
Water stoppage during cleaning	Pressing buttons stops automatically after about 90 seconds. 	Re-press buttons. 
	Human body may not be touching the touch text sensors.	Please check the sensing position of the touch base
At the beginning of the cleaning process, sprinkle around the nozzle for a few seconds. Sprinkle the inside of the toilet for a few seconds.	When you start cleaning, it is not a malfunction that the nozzle discharges the cold water in the nozzle first in order to avoid cold water spraying out of the pipeline during warm water cleaning, which may affect the comfort of cleaning.	-

Touch-sensitive

Trouble	Tests and Results	Solution
In the unseated state, cleaning is initiated in the following cases	Has the seat been splashed with water or is there a wet towel on it?	Please use a dry towel to wipe off the water Please move the wet towel away Turn off the non-seated

Auto flushing

Trouble	Tests and Results	Solution
Auto flush function does not work.	Is Auto flush function turned off? (When the function is turned off, the icon is not lit on the remote control display.)	Press Auto flush button to turn on the function. 

Touch-sensitive

Trouble	Tests and Results	Solution
The seat is cold.	Is the seat temperature setting low or off?	Press on the remote control. 
	Is it in energy saving status?	Wait for 1 min after being seated.
The seat temperature becomes lower.	To prevent low-temperature burns, from theseat the temperature is automatically lowered to a gear, after 3 minutes, this is not a failure, set temp will will resume on next use of the toilet.	

Energy saving


Trouble	Tests and Results	Solution
After a few days of non-use or the commode doesn't work	Is the power cord unplugged or power outage? Automatically goes into standby after 4 days of non-use	Re-energize and press any key to resume

Remote control

Trouble	Tests and Results	Solution
Remote control functions incorrectly.	Are batteries running out of power?	Change batteries.
	Polarity of battery is reversed.	Please install the batteries correctly.
	Seat sensor does not detect human body.	Use after correctly seating

Remote control flushing

Trouble	Tests and Results	Solution
Remote control flushing functions incorrectly.	Are batteries running out of power?	Change batteries.
	Whether the flush button is continuously pressed.	Stop for 30s every time after you press the button.
	Seat sensor does not detect human body.	Seat correctly and try again

 Trouble	Tests and Results	Solution
Decrease in wash water pressure	Is the set water pressure weak	Press the button on the remote control to turn up the water pressure 
	Is the nozzle or filter clogged	Cleaning nozzles or filters
The water is not warm enough	Whether the warm water switch is turned off or the set temperature is too low	Press the button on the remote control to Adjustment of water temperature 
Water stoppage during cleaning	Pressing buttons stops automatically after about 90 seconds. 	Re-press buttons. 
	Human body may not be touching the touch text sensors.	Please check the sensing position of the touch base
At the beginning of the cleaning process, sprinkle around the nozzle for a few seconds. Sprinkle the inside of the toilet for a few seconds.	When you start cleaning, it is not a malfunction that the nozzle discharges the cold water in the nozzle first in order to avoid cold water spraying out of the pipeline during warm water cleaning, which may affect the comfort of cleaning.	-

Touch-sensitive

Trouble	Tests and Results	Solution
In the unseated state, cleaning is initiated in the following cases	Has the seat been splashed with water or is there a wet towel on it?	Please use a dry towel to wipe off the water Please move the wet towel away Turn off the non-seated

Auto flushing

Trouble	Tests and Results	Solution
Auto flush function does not work.	Is Auto flush function turned off? (When the function is turned off, the icon is not lit on the remote control display.)	Press Auto flush button to turn on the function. 

Touch-sensitive

Trouble	Tests and Results	Solution
The seat is cold.	Is the seat temperature setting low or off?	Press on the remote control. 
	Is it in energy saving status?	Wait for 1 min after being seated.
The seat temperature becomes lower.	To prevent low-temperature burns, from theseat the temperature is automatically lowered to a gear, after 3 minutes, this is not a failure, set temp will will resume on next use of the toilet.	

Energy saving

Trouble	Tests and Results	Solution
After a few days of non-use or the commode doesn't work	Is the power cord unplugged or power outage? Automatically goes into standby after 4 days of non-use	Re-energize and press any key to resume

Remote control

Trouble	Tests and Results	Solution
Remote control functions incorrectly.	Are batteries running out of power?	Change batteries.
	Polarity of battery is reversed.	Please install the batteries correctly.
	Seat sensor does not detect human body.	Use after correctly seating

Remote control flushing

Trouble	Tests and Results	Solution
Remote control flushing functions incorrectly.	Are batteries running out of power?	Change batteries.
	Whether the flush button is continuously pressed.	Stop for 30s every time after you press the button.
	Seat sensor does not detect human body.	Seat correctly and try again

Bubble functions

Trouble	Tests and Results	Solution
Fail to foam, or make a coarse foam	Maybe the foam is running out.	Replacement with new foam liquid

Warm air drying

Trouble	Tests and Results	Solution
The warm air isn't warm enough.	The drying temperature is set at a low setting	Press button on the remote control to adjust the temperature 
Stopping on the way to drying Warm air drying not working	Press button for 3 seconds to stop automatically  Sitting position has moved may turn off the touch seat sensor, stop drying function	Please press the button again.  Please check the seating ring and seating position
Warm air drying not working	Seat sensor does not detect human body.	Please check the seating ring and seating position

Other problem

Trouble	Tests and Results	Solution
The water comes up slowly in the water tank.	Is the water shut-off valve fully opened ? Is the water filter in the drain valve blocked? Sharing water with other devices in the bathroom.	Fully open the valve. Clean the filter. —
No water comes out.	Is the water cut off?	Fully open the valve. Wait for water.
Water is leaking from the plumbing connections.	Is a plumbing connection nut loose?	Use a monkey wrench or similar tool to tighten the loose part more.

Specifications

Model		BTW,WFP,WHP and smart series are available
Rated power		220-240V AC, 50Hz
Rated power consumption		1210W(based on inlet water temperature is 15°C, outlet water temperature and rear water flow as well as seat heater are set to the highest level)
Maximum power consumption		About 1650W(based on inlet water temperature is 5°C, outlet water temperature and rear water flow as well as seat heater are set to the highest level).
Power cord length		1.5m
Function	Flushing volume	About 4.5L
	Flushing method	RIMLESS TORNADO PLUS
Cleaning device	Rear wash	Max 0.65 L/min (at 0.2 MPa water pressure)
	Front wash	Max 0.7 L/min (at 0.2 MPa water pressure)
	Child wash	Max 0.41 L/min (at 0.2 MPa water pressure)
	Water temperature	34-40°C
	Heating mode	Instant
	Water heater	1210W(suppose inlet water temperature is 15°C, outlet water temperature and rear water flow are set to the highest level). 1650W(suppose inlet water temperature is 5°C, outlet water temperature and rear water flow are set to the highest level).
	Safety device	Temperature fuse, temperature sensor
Warm seat	Surface temperature	34-40°C
	Heating power	Rated power consumption 250W, different power consumption at different level
	Safety device	Temperature fuse, temperature sensor
Drying	Drying temperature	38-55°C
	Heating power	Rated power consumption 250W, different power consumption at different level
	Safety device	Temperature fuse, thermostat
Cleaning water flow		Cleaning function will stop if the water flow is under 250ml/min.
Waterproof level		IPX4
Water supply temperature		34-40°C
Ambient temperature		5-40°C
Dimensions		For specific information, please refer to the numerical values of the corresponding style
Weight		For specific information, please refer to the numerical values of the corresponding style
Range of water pressure used		0 1-0.75MPa